



Scan for full manual

VW-9 Quick Start Guide


This guide helps you install and use your VW-9 for the first time.

Go to www.kramerav.com/downloads/VW-9 to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box


- ✓ VW-9 3x3 video-wall Driver with Multiviewer
- ✓ 1 Set of rack ears
- ✓ 1 Quick start guide
- ✓ 2 Power cords

Step 2: Get to know your VW-9

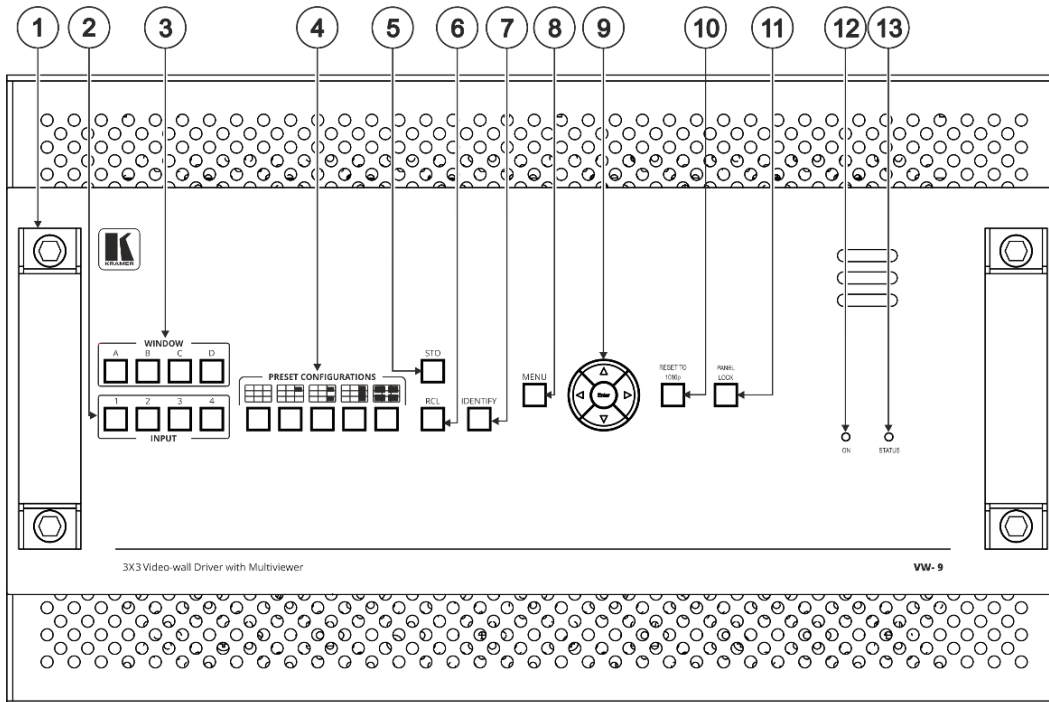

#	Feature	Function										
1	Metal handles (x2)	Rigid metal handles for easy handling.										
2	INPUT Buttons (1 to 4)	After pressing a Window button (above), press an input button to select this input for that window. If the wall configuration has only one window, then pressing an input button will select that input for the wall.										
3	WINDOW Buttons (A to D)	Press to select window A, B, C or D.										
4	PRESET CONFIGURATION Buttons	Press a configuration button to set one of the following presets (each window in the Multiview mode can be resized and repositioned via the embedded web pages): <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;"></td> <td>Video wall mode – the video of one source only is presented over the video wall.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Multiview mode, presenting 1 PiP window over a parent picture in the video wall.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Multiview mode, presenting 2 PiP windows over a parent picture in the video wall.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Multiview mode, presenting 3 PiP windows over a parent picture in the video wall.</td> </tr> <tr> <td style="text-align: center;"></td> <td>Multiview mode, presenting 4 windows over a 3x3 video wall.</td> </tr> </table>		Video wall mode – the video of one source only is presented over the video wall.		Multiview mode, presenting 1 PiP window over a parent picture in the video wall.		Multiview mode, presenting 2 PiP windows over a parent picture in the video wall.		Multiview mode, presenting 3 PiP windows over a parent picture in the video wall.		Multiview mode, presenting 4 windows over a 3x3 video wall.
	Video wall mode – the video of one source only is presented over the video wall.											
	Multiview mode, presenting 1 PiP window over a parent picture in the video wall.											
	Multiview mode, presenting 2 PiP windows over a parent picture in the video wall.											
	Multiview mode, presenting 3 PiP windows over a parent picture in the video wall.											
	Multiview mode, presenting 4 windows over a 3x3 video wall.											

#	Feature	Function	
5	STO Button	Press, followed by an Input button (1 to 4), to save the current wall configuration.	
6	RCL Button	Press, followed by an Input button (1 to 4), to recall a pre-saved wall configuration.	
7	IDENTIFY Button	When pressed, will identify each window by displaying A, B, C or D in it.	
8	MENU Button	Displays the OSD menu.	
9	Navigation Buttons	◀	Press to decrease numerical values or select from several definitions. When not in the OSD menu, press to reduce the output volume.
		▲	Press to move up the menu list values.
		▶	Press to increase numerical values or select from several definitions. When not in the OSD menu, press to increase the output volume.
		▼	Press to move down the menu list.
	ENTER	Press to accept changes and change the SETUP parameters.	
10	RESET TO 1080p Button	Press and hold for about 5 seconds to set the output resolutions to 1080p.	
11	PANEL LOCK Button	Press and hold to toggle locking and unlocking the front panel buttons.	
12	ON LED	Lights green when power is on.	
13	STATUS LED	Lights green when fan operates properly. Flashes in case of fan malfunction.	

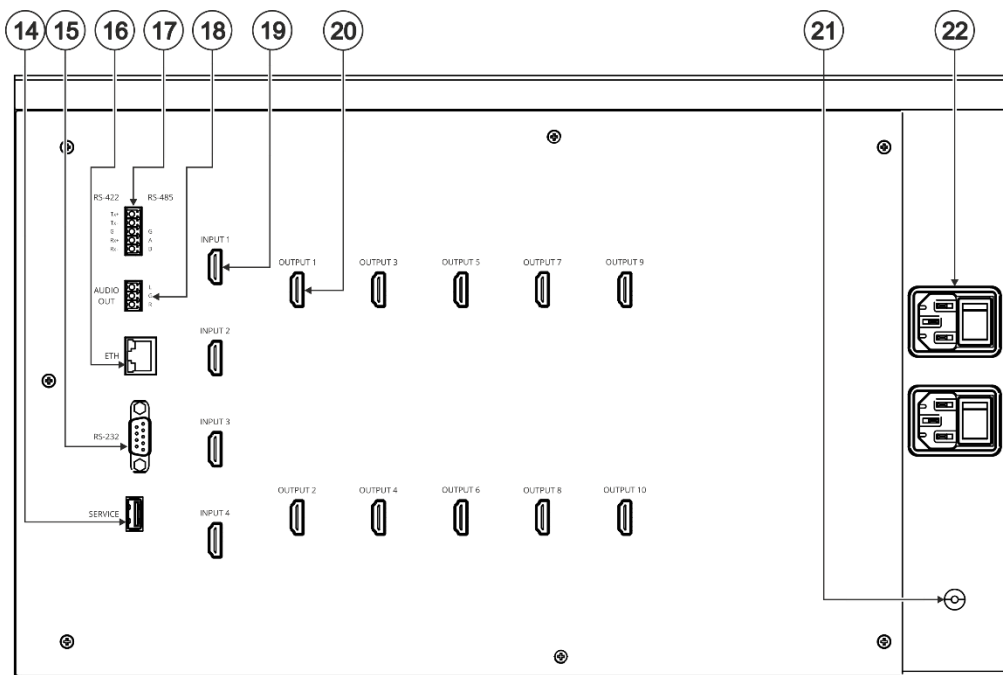

#	Feature	Function	
14	SERVICE USB Port	Connect to a PC to perform firmware upgrade.	
15	RS-232 9-pin D-sub Serial Port Connector	Connect to a PC/serial controller	
16	ETHERNET RJ-45 Connector	Connect to a PC or other serial controller via a LAN.	
17	5-pin Terminal Block Connector	RS-422 (Tx+, Tx-, G, Rx+, Rx-)	Connect to a PC/serial controller.
		RS-485 (G, A, B)	
18	AUDIO OUTPUT 3-pin Terminal Block Connector (L, G, R)	Connect to an unbalanced stereo audio acceptor (for example, powered speakers).	
19	INPUT HDMI Connectors (1 to 4)	Connect to up to 4 HDMI sources.	
20	OUTPUT HDMI Connectors (1 to 10)	Connect to 9 HDMI displays to create a 3x3 video wall. An additional output can also be connected to an acceptor, allowing video wall sizes with up to 10 displays.	
21	Grounding Opening	Use an M3 screw to lock the ground wire and connect to ground (if necessary).	
22	Mains Power Connector and Power Switch	Plug in the power cord and use the switch to power the unit on or off.	

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Step 3: Mount VW-9

To rack mount the machine, attach both rack ears (by removing the screws from each side of the machine and replacing those screws through the rack ears) or place the machine on a table.




- Ensure that the environment (e.g., maximum ambient temperature & air flow) is compatible for the device.
- Avoid uneven mechanical loading.
- Appropriate consideration of equipment nameplate ratings should be used for avoiding overloading of the circuits.
- Reliable earthing of rack-mounted equipment should be maintained.

Step 4: Connect inputs and outputs

Always switch OFF the power on each device before connecting it to your **VW-9**.

This diagram shows an example of configuring a 3x3 video wall in multi-viewer mode. Other configurations can be set via the embedded webpages.

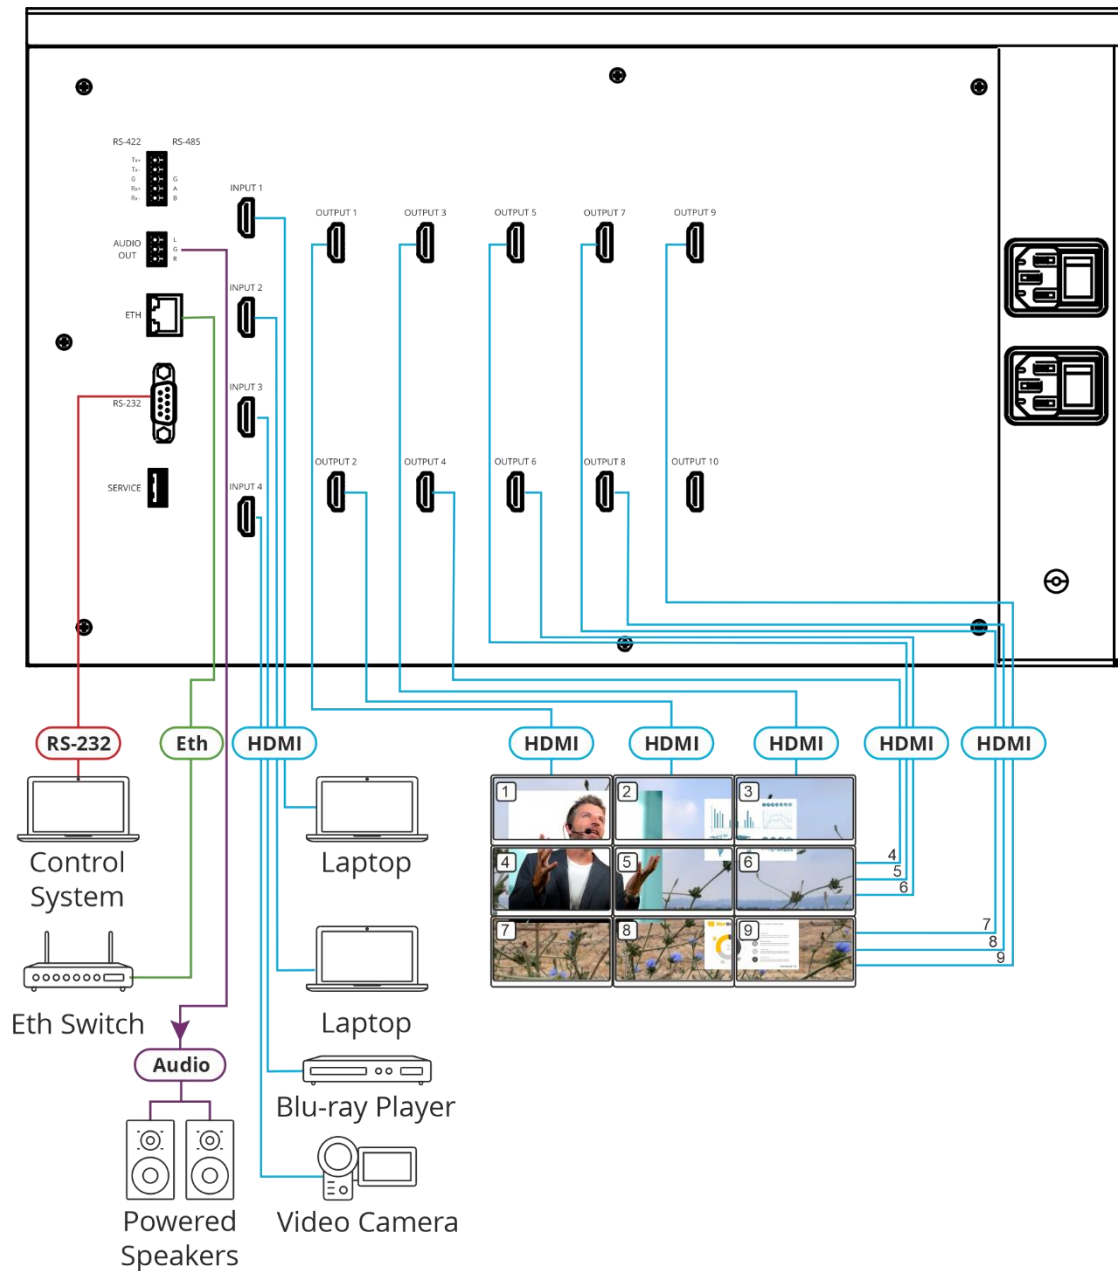

Step 5: Connect power

Connect the power cord to **VW-9** and plug it into the mains electricity.

Safety Instructions (See www.kramerav.com for updated safety information)

Caution:

- For products with relay terminals and GPIO ports, please refer to the permitted rating for an external connection, located next to the terminal or in the User Manual.
- There are no operator serviceable parts inside the unit.

Warning:

- Use only the power cord that is supplied with the unit.
- Disconnect the power and unplug the unit from the wall before installing.
- Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.
- To ensure continuous risk protection, replace fuses only according to the rating specified on the product label which located on the bottom of the unit.



Step 6: Operate VW-9

Operate **Product** via:

- Front panel buttons.
- Remotely, by RS-232/RS-422/RS-485 serial commands transmitted by a touch screen system, PC, or other serial controller.
- Embedded web pages via the Ethernet.

RS-232 Control / Protocol 3000

Baud Rate:	115,200	Parity:	None
Data Bits:	8	Command Format:	ASCII
Stop Bits:	1		
Example: (mute video on output 1): #VMUTE 1,1			