OCHNO

Pull Out Cable Management
Installation Guide

Installation Guide

This guide helps you to install Ochno Pull Out Cable Management kit in a few easy steps.

Go to www.ochno.com/support to view more support information and get the latest updates.

You can also scan the QR code and open the support page directly on your mobile.

Check what's in the box

Textile bag	Metal bracket	Weight	Installation Guide
Safety Notice			

Description

For full installation of Ochno USB-C pull out cable system, the following parts are required:

Product 1: Ochno Pull Out Cable Management kit: O-POS-CMGT		
Textile bag	Weight	Metal bracket

One of the following Ochno pull out sockets:

| **Product 2:** Ochno Pull Out Socket			
O-POS-AL-1 (aluminium)	O-POS-BL-1 (black)	O-POS-LED-AL-1 (aluminium, with LED button)	O-POS-LED-BL-1 (black, with LED button)

One Ochno USB-C cable:

Product 3: Ochno USB-C Cable
For list of all compatible USB-C cables, see www.ochno.com/products

Product Dimensions

Detailed measurements for proper installation of the Ochno Pull Out Cable Management kit:

Side View

560 mm

Top View:

120 mm

50 mm
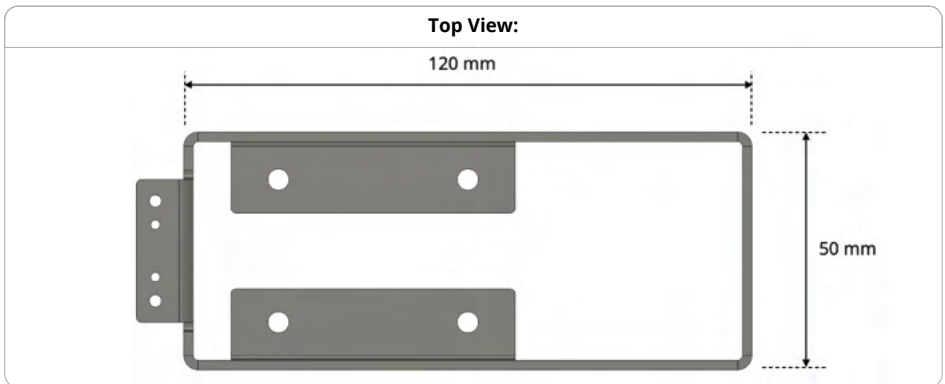
Planning Installation: Placement and Cable Limits

Before starting the installation, it is crucial to plan where to position the Ochno Power Conference Switcher or Ochno Power Hub and the pull out socket. Proper placement ensures efficient cable management, optimal functionality, and a clean installation.

The placement of the socket depends on the length of the USB-C cable being used. Take time to carefully measure and verify distances before proceeding, as incorrect placement may impact the setup. Follow the steps below to ensure the best results.

Step 1: Determine Placement
Decide where to position the Ochno Power Conference Switcher and the pull out socket's metal bracket under your table.

Step 2: Cable Length Matters
- 2 meter USB-C cable:
  The socket must be installed no more than 90 cm from the Ochno USB-C input port.
- 3 meter USB-C cable:
  The socket must be installed no more than 190 cm from the Ochno USB-C input port.

Step 3: Drill the Hole
Drill a 20mm hole in the table at the chosen location for the socket.

2 meter USB-C cable: max 90 cm
3 meter USB-C cable: max 190 cm

O-PC-4   USB–C
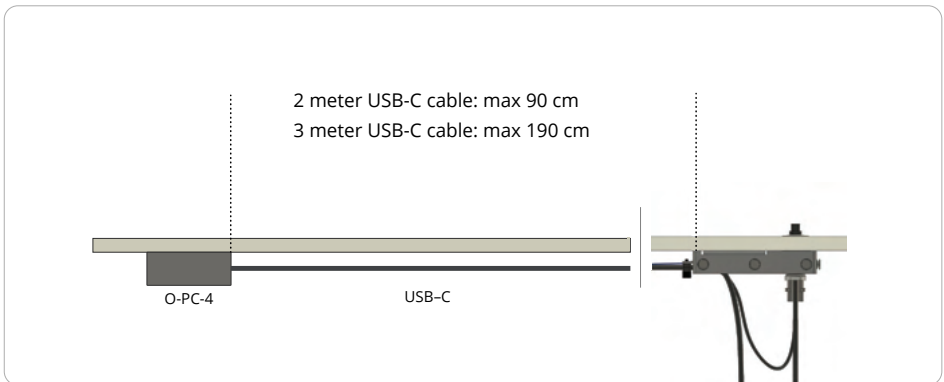
NOTE! For pull out sockets without LED buttons (O-POS-BL-1 or O-POS-AL-1) refer to the simplified guide starting on page 9.

Installation O-POS-LED-XX-1

Step 1
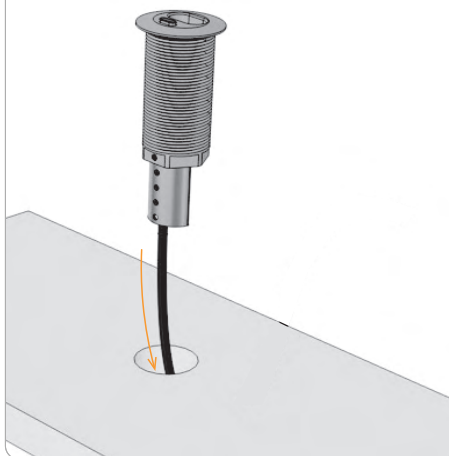Unpack the socket.

NOTE!
This cable is referenced as the "SBC Cable"

Step 2
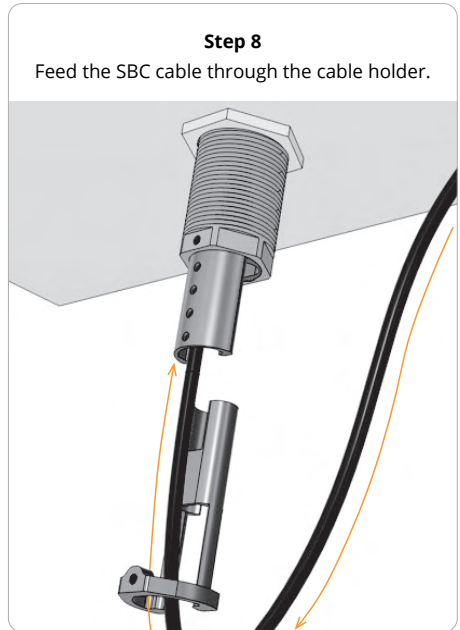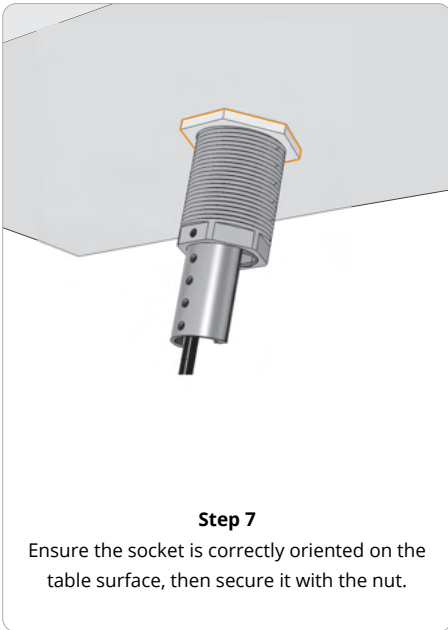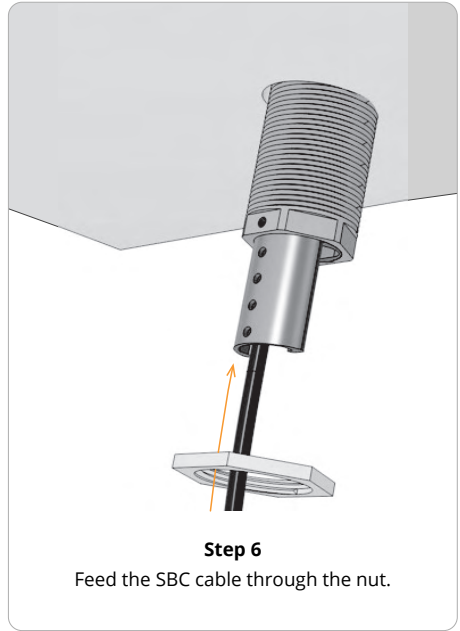Remove the cable holder.

Step 3
Remove the nut.

Step 4
Feed the SBC cable through the 20mm hole.

Installation O-POS-LED-XX-1

Step 5
Position the socket within the hole.

Step 6
Feed the SBC cable through the nut.

Step 7
Ensure the socket is correctly oriented on the table surface, then secure it with the nut.

Step 8
Feed the SBC cable through the cable holder.
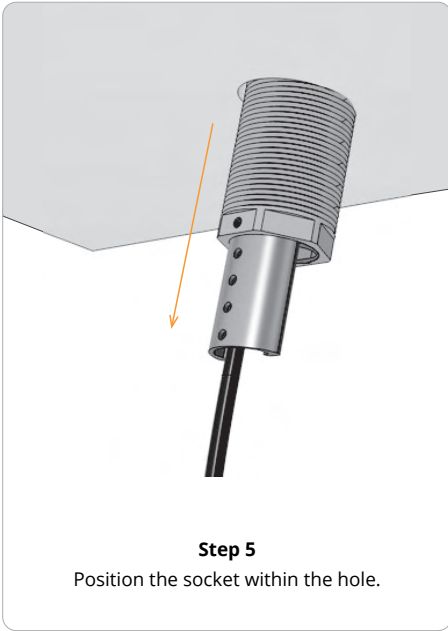
Installation O-POS-LED-XX-1

Step 9
Feed the USB-C cable through the weight.
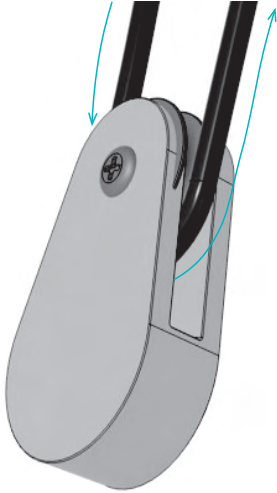
Step 10
Feed the USB-C cable through the socket.
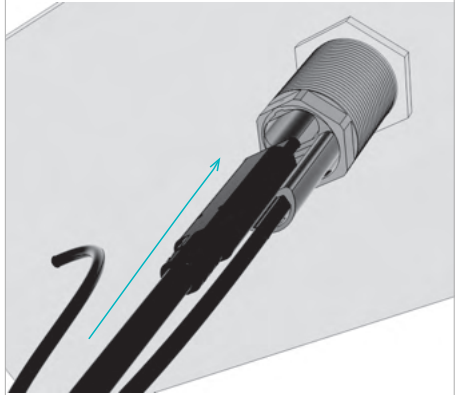
Step 11
Position the cable holder in the socket.

Step 12
Secure the cable holder at the desired height.

NOTE!
Position screw within one of the holes to avoid gap.
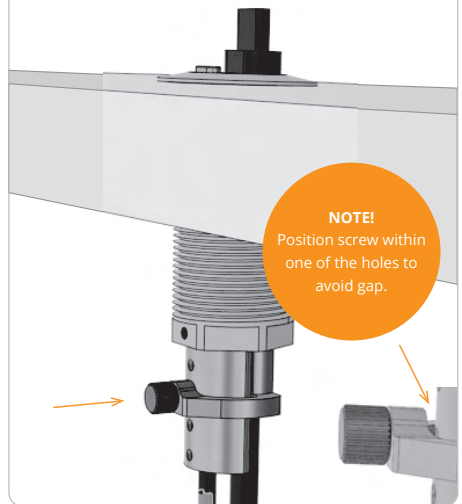
Installation O-POS-LED-XX-1

Step 13

Center the socket within the bracket.

Step 14

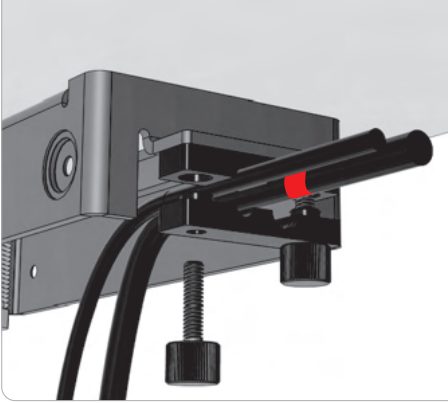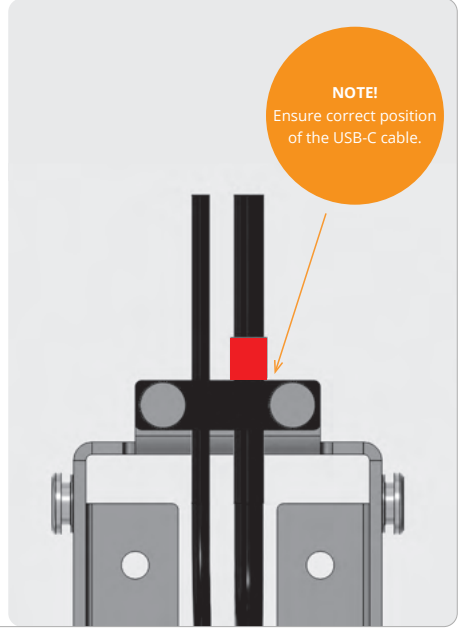Attach the metal bracket to the table
with the use of suitable screws.
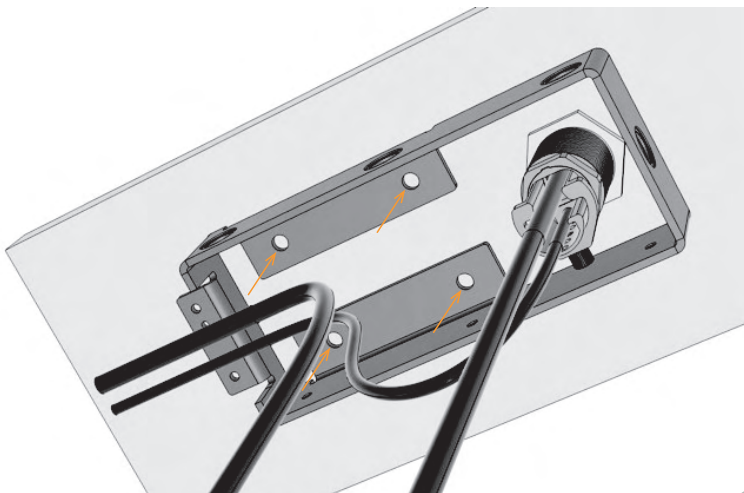
Installation O-POS-LED-XX-1

Step 15

Place the SBC and USB-C cables into the cable fixture. Important to align the USB-C cable with the red mark.

NOTE!
Ensure correct position of the USB-C cable.

Step 16

Secure the cables with screws.
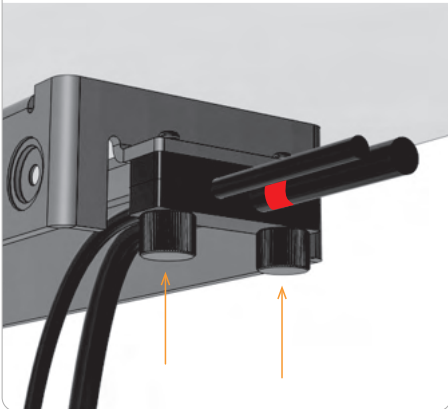
Step 17

Confirm that all parts are assembled as follows.

NOTE!
Check if the weight touches the bottom of the bag. If so, pull the USB-C cable out slightly.

Installation O-POS-LED-XX-1

Step 18
Assemble the bag with the buttons.

Step 19
The installation is complete! Enjoy a clean table with easy access to charging, screen sharing and video conferencing.
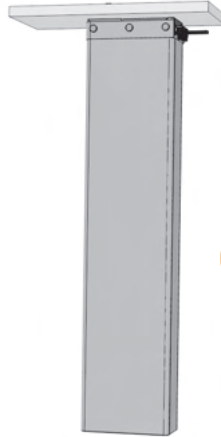
DONE!

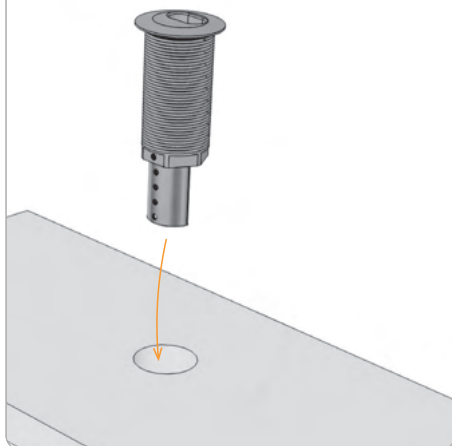# Installation O-POS-XX-1

Step 1
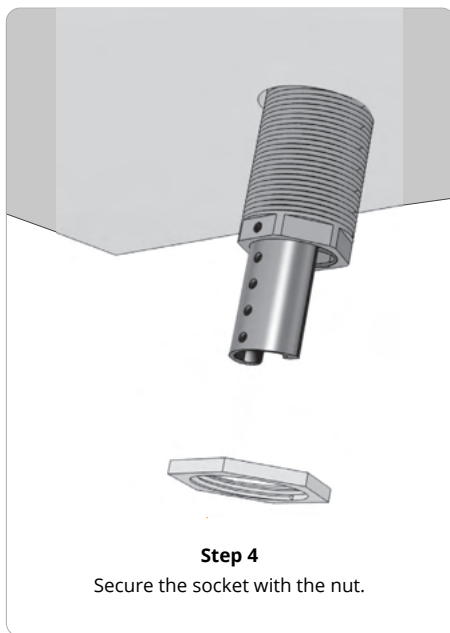Unpack the socket.

Step 2
Remove the cable holder.
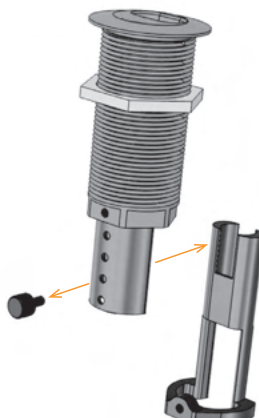
Step 3
Align the socket to the 20mm hole.
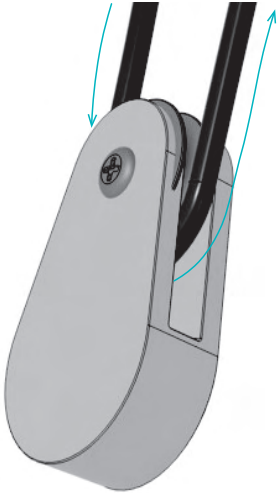
Step 4
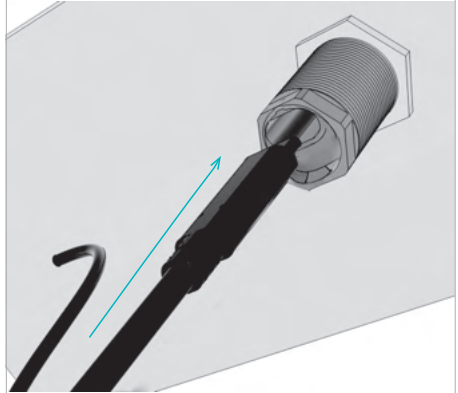Secure the socket with the nut.

Installation O-POS-XX-1

Step 5
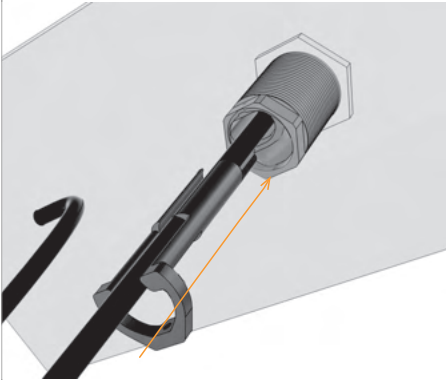Feed the USB-C cable through the weight.
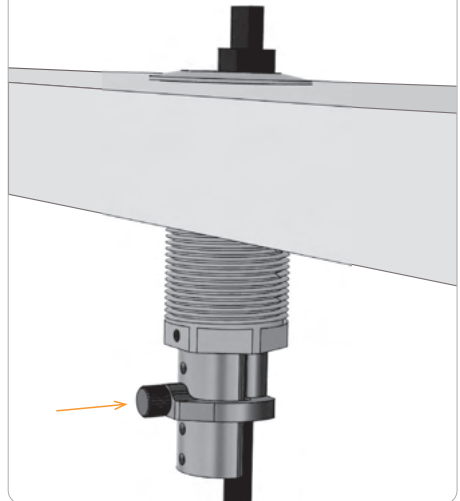
Step 6
Feed the USB-C holder through the cable holder.

Step 7
Position the cable holder in the socket.

Step 8
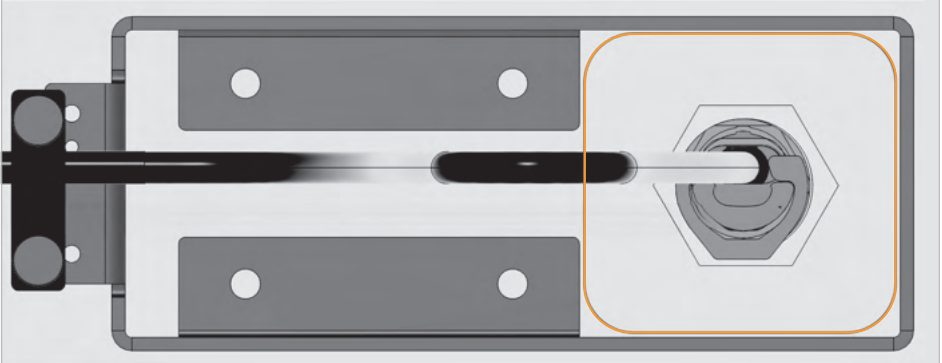Secure the cable holder at the desired height.
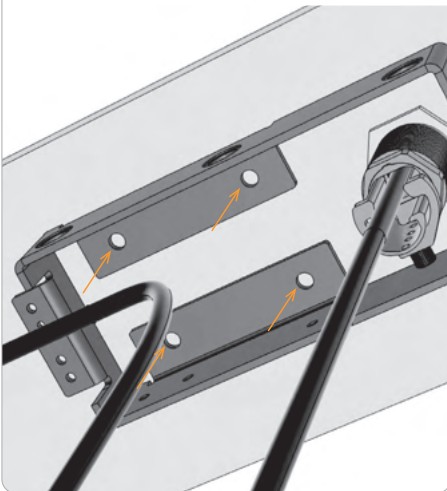
Installation O-POS-LED-XX-1

Step 9
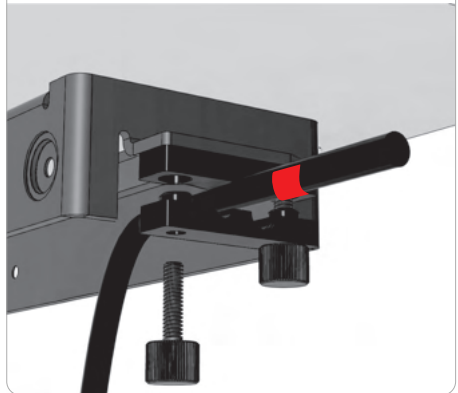Center the socket within the bracket.

Step 10
Attach the metal bracket to the table with the use of suitable screws.
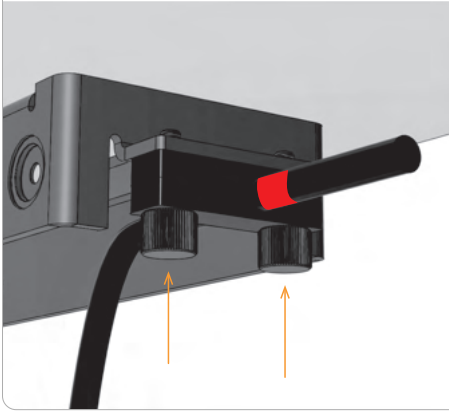

Step 11
Place the USB-C cable into the cable fixture. Important to align the USB-C cable with the red mark:
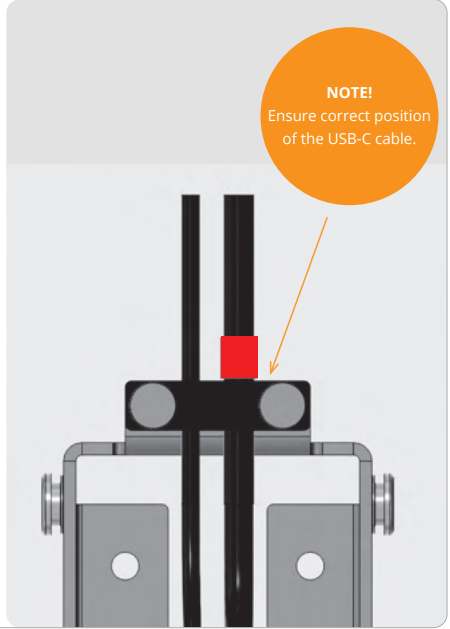
Installation O-POS-XX-1

Step 12
Secure the cable with screws.

NOTE!
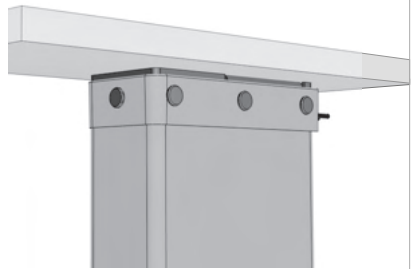Ensure correct position of the USB-C cable.

Step 13
Confirm that all parts are assembled as follows.

NOTE!
Check if the weight touches the bottom of the bag. If so, pull the USB-C cable out slightly.

Step 14
Assemble the bag with the buttons.

Installation O-POS-XX-1

Step 15

The installation is complete! Enjoy a clean table with easy access to charging, screen sharing and video conferencing.

DONE!

For more information, detailed instructions, and support, visit www.ochno.com or contact our customer service team.

CE UK CA RoHS REACH